


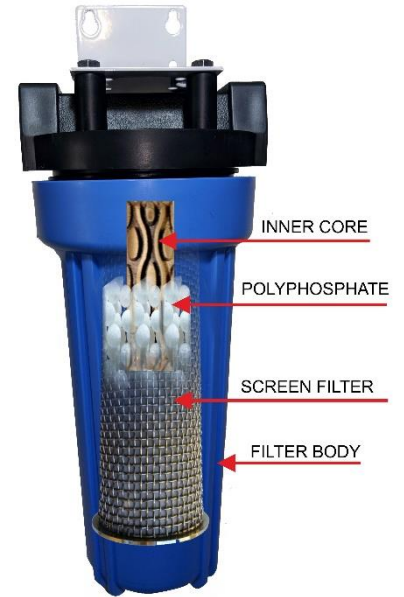

Installation: This Salt Free Water Softener has 3/4" female threads on both sides and can be adapted for 1/2" by using reducing bushings. Install the filter in the vertical position and make sure adequate support is provided for the filter so it's not weighting down your plumbing system. Use Teflon tape and pipe thread compound on all threads.

Locate the extra parts that came with your filter. You will see the wall bracket. Install the included bracket using the included screws.

Approximately every 6-8 months, check the level of poly-phosphate and you should remove and clean the Hard Water Bullet core and clean the 50-mic filter **from the inside out**. Be sure and press the red pressure relief valve before un-screwing the filters bottom!



The inner poly cartridge holds 6 oz of standard size poly-phosphate and can be purchased from our site, and we also offer the prefilled canister ready to install.

To re-fill the poly cartridge, using a small screwdriver pry off the "Unvented" end of the cartridge for re-filling.

When reinstalling the inner tube and cartridge into the housing, place the stainless screen into the bottom of the filter housing, then place the inner tube and blue poly cartridge into the stainless screen. Assemble the inner tube as shown, making sure that the tube is inserted to the rivet, and make sure that the inner core is placed into the tube.



Screw the lower canister housing assembly back onto the filters top

