


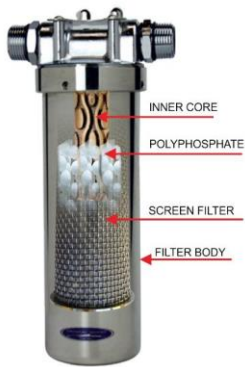

It is highly recommended that you use Teflon tape on all threads with thread compound. Skipping this step will likely lead to a leak. Install the filter in the vertical position and make sure adequate support is provided for the filter so it's not weighting down your plumbing system. Use the provided wall bracket.

Locate the extra parts that came with your filter. You will find a housing handle and a 7oz bag of polyphosphate packed inside the filter. Install the filter with the water flowing with the direction arrows on the filter top.



Approximately every 6-8 months, check the level of polyphosphate and you can remove and clean the Hard Water Bullet core and clean the screen filter at this time if needed. The filter holds 7 oz of poly-phosphate and can be purchased from our site. Remove the bottom half of the filter housing to access the filter, bullet core and poly-phosphate crystals.

from fitting all the way down.

Pull the inner tube along with the black cap out of the filter using a screwdriver and using a funnel if necessary; pour 7 oz of poly-phosphate crystals into the filter. Do not overfill which will keep the black cap



Remove the Hard Water Bullet core and soak in vinegar for about an hour as needed. Also using a stiff brass wire brush while rinsing under running water

works well for removing any deposits. The bullet core will work at its best performance when it's clean. Reinstall the bullet core, making sure that the bevel is pointing UP and then re-install the entire bottom assembly to the top housing.

